

MiFa

Sing it Just



MUSIC PLAYER

MT800



USB



TF



SUPER BASS




REMOTE CONTROL

● TWS (True Wireless Stereo) MODE

Place two Mifa MT800 units next to one another.

- Press MODE on both units until Bluetooth mode is selected.
- On one of the units, press and hold TWS button until the display shows “TWS” to connect units.
- On a smart device, search for Mifa MT800 within the Bluetooth menu and connect to it.
- The audio file will now be able to play from your smart device to both music players.


TOP CONTROL PANEL OVERVIEW

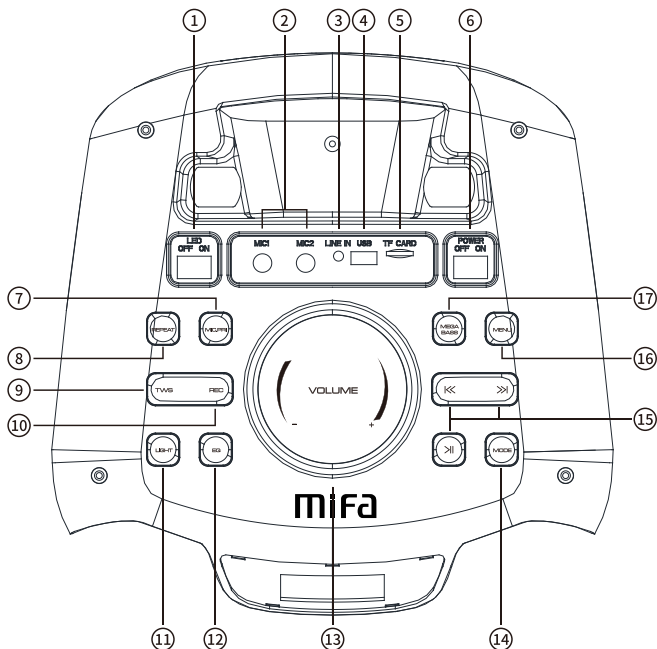

1. Light Switch: On/Off light
2. Wired Microphone Input: Plug the microphone wire into either of these jacks
3. AUX In: Play the file on the device connected to the AUX input
4. USB Input: Insert USB to play
5. TF Card Input: Insert TF Card to play
6. Power: On/Off power
7. Mic. Pri: Microphone priority
8. Repeat Function: Press to repeat one & repeat all
9. TWS: True Wireless Stereo function
10. Record Function: Short press will record in the USB/TF Card's "RECORD" file. Long press will play recorded file.
11. Light Switch: Press to change light color and light style.
12. EQ: Press to change Equalizer type (6 Equalizer types).
13. Main Volume: Turn the knob to adjust master volume level and Mic volume.

14. Mode: Short press to select LINE (Aux-in)/USB /FM /Wireless BT mode; long press to on/off voice prompt.
15. Next Song: Short press to get next sound/channel; long press to fast forward.
Previous Song: Short press to get previous sound/channel; long press to fast backward.
Pause & Play: Short press to pause and play music; long press to switch folder in USB/TF memory card.
16. MENU: Short press to toggle Bass/Treble/Mic Volume/Mic Echo; long press to turn the volume to 5.
17. MEGA BASS: Gives the sound a stronger bass effect (press to on/off).

REMOTE CONTROL OVERVIEW

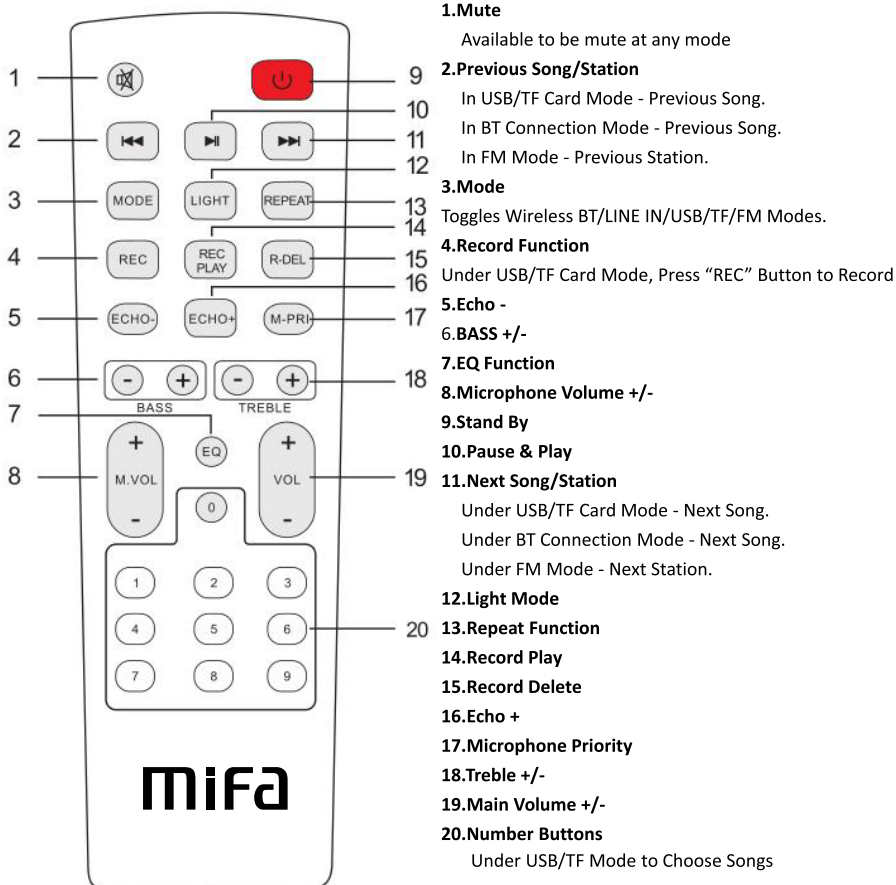

INSTRUCTIONS FOR USE AND CARE

Safety Information

Please read this manual carefully before using the product.

Keep the manual in a safe place for future references.

- a. There are high voltage areas inside this unit that can cause injuries. Please do not open the unit. In case of a technical failure, please contact an authorized service center.
- b. Never place the unit in the rain or in moist areas in order to avoid electric shock or fire caused by short circuit.
- c. This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d. If technical maintenance is required, please contact the authorized service center.
- e. If the power supply cable is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

Package Content

- Remote Control
- Wireless Microphone
- Power Cable
- User's Manual

OPERATING INSTRUCTIONS

● **WIRELESS BT MODE:**

- Press MODE and select Bluetooth (Blue) mode for Bluetooth pairing.
- Once Bluetooth mode is selected, your music player will automatically enter pairing mode if not already paired to another device.
- Search for the model number Mifa MT800 on your Bluetooth menu on the smart device and select it.
- Once selected, the smart device and music player will connect. When connected you can control your music player through the top panel controls or the smart device.

● **LINE IN MODE:**

- Press MODE until AUX is selected.
- Make sure a 3.5mm AUX cable is plugged into your audio device from the AUX port on the top of music player.
- In AUX mode, you can only control the functions through the audio device; although, you can adjust the volume on either device.

● **FM RADIO MODE**

Press MODE until FM Radio is selected.

- Press the P/P (Play/Pause) button to auto scan FM Radio stations. All available stations will be stored Automatically.
- Press the NEXT or PREVIOUS button to navigate through the saved radio stations.

● **USB AND TF CARD MODE**

NOTE: Please make sure a USB Drive or TF Card is inserted in the USB/TF Card port located on the top of the music player.

- Press MODE until USB/TF Card is selected.
- You can use the control on the top of your music player to navigate through songs (tracks), play/pause, volume.