

Safety instructions

Please read the following before using Creative products:

- Use a mains plug that is appropriate for your country or region
- To be completely disconnected from the power input, the mains plug has to be disconnected/detached from the mains
- Disconnect the mains plug when the device is expected to be unused for several days

Technical Specifications

Creative E2800

Power output

Satellite speaker: **13 Watts (RMS) per channel**

Subwoofer: **24 Watts (RMS)**

Total : **50 Watts**

Signal-to-Noise Ratio: **≥ 70dB**

Frequency Response: **45Hz - 20kHz**

Input Rating: **220-230V~50 / 60Hz 190mA**

Supported file formats on USB Thumb drive and SD Card mode : MP3 (Both 32GB Max)

Does not support SDXC cards

FM radio scanning frequency: **87.5MHz - 108MHz**

Equalizer settings are only available on USB Thumb drive / SD Card playback mode only

Important Notice

The serial number for your **Creative E2800** is located on the subwoofer. Please write this number down and keep it in a secure place.

 
CREATIVE



SBS E2800

Quick start guide

Product Overview

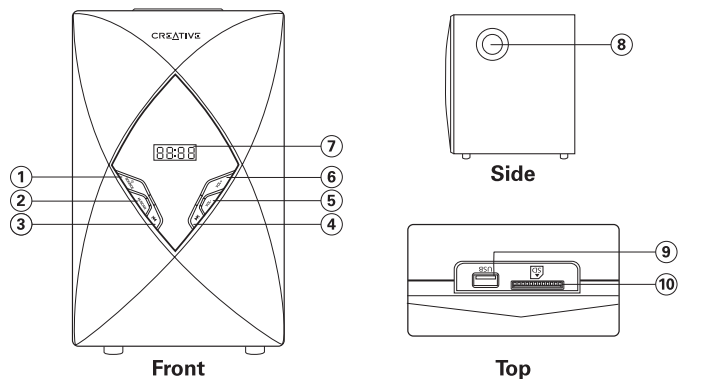

- | | | | |
|--------------|------------------------------|-------------------|---------------------|
| 1) / Source | 5) Volume - | 9) USB Drive Slot | 13) Left Satellite |
| 2) / Scan | 6) Volume + | 10) SD Card Slot | 14) Right Satellite |
| 3) | 7) Source / Volume Indicator | 11) FM Antenna | 15) Power Cord |
| 4) | 8) Subwoofer Port Tube | 12) 3.5mm Aux-in | |


To Power ON/OFF Speaker

- Speaker is at "Standby" mode when power supply is switched on, with LED display showing "----". Press / Source" button to switch the speaker on. Press and hold / Source" button to let the speaker enter into "Standby" mode again.

To Switch between Sources


- Press / Source" on the subwoofer panel to switch source. You can choose "Aux / USB / SD / FM" input mode consecutively. ("Au" means "AUX" input mode; "Ud or Sd" means "USB or SD" input mode; "87.5" means "FM" mode.)

Button	Action	Inputs		
		AUX Input	USB/SD Input	FM Tuner
	Press	—	Track Selection Previous / Next	Channel Selection Previous / Next
	Press	Mute	Play / Pause	Mute
	Press and hold	—	—	Automatic Search FM Radio

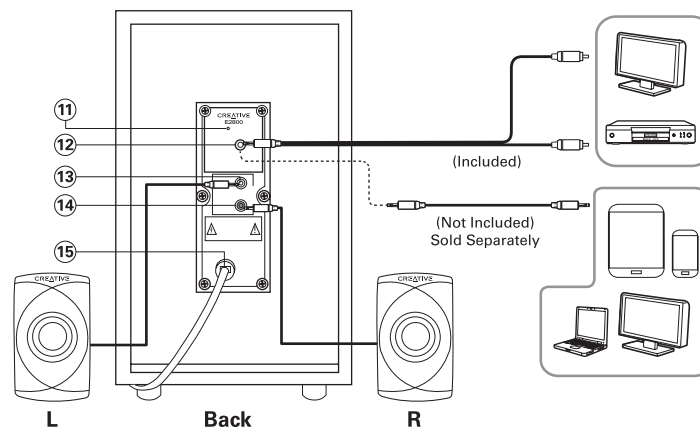 

Infra Remote Control

 - Power On or standby**
- Mute:** Turns volume off. Press again to unmute.
- 0 - 9:** Press your desired track or stored FM station preset channel and press to jump to respective track / FM station
- Aux:** AUX input mode selection
- USB / SD:** USB / SD reader mode selection
- FM:** FM tuner mode selection
- EQ:** Normal, Classic, Pop, Jazz, Rock, Country (USB/SD mode)
- Volume +:** Volume level 00 - 30 (max)
- Previous Track**
- Volume -:** Volume level 00 - 30 (max)
- Next Track**
- Play / Pause**
- TUNING-**
- TUNING+**

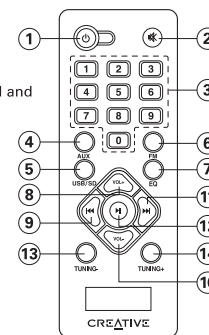

- When you enter FM mode, press and hold to automatic search FM radio stations. Press "Next" or "Previous" to change stored FM memory stations.
- Press "TUNING+/-" each time to search channel step by step (each step 0.1MHz). Press and hold "TUNING+/-" to search for next available channel. Once found, it will play the channel automatically.