 



规格130×85MM 骑马钉 封面128克铜版纸，内页80g书写纸，哑膜

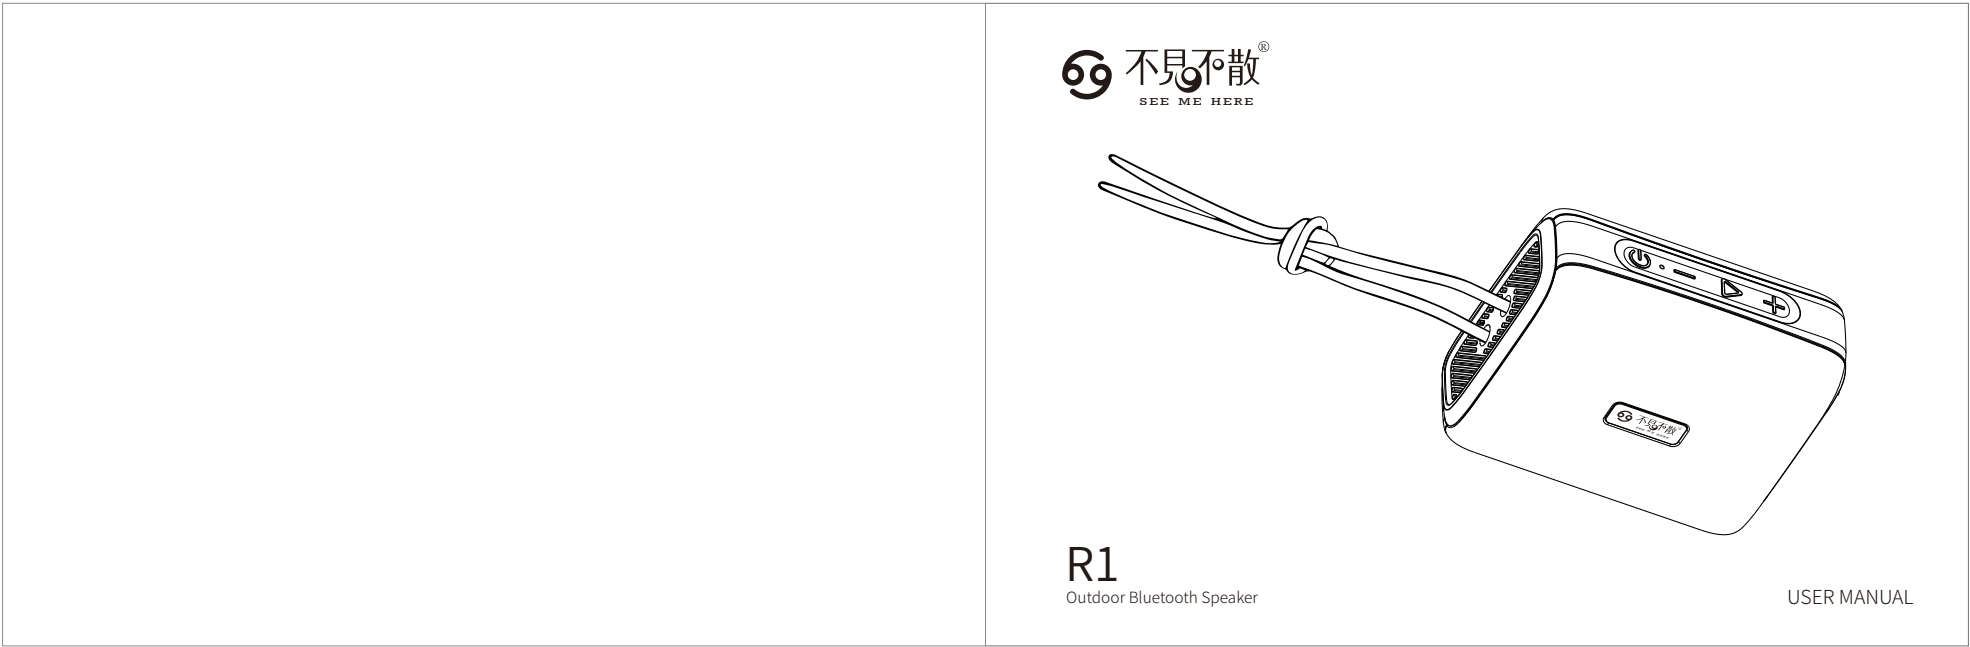

01 Warnings


English





- ◆To ensure proper use and trouble-free operation, please carefully read this user manual first.
- ◆For the first use, a full charge is recommended.
- ◆Please use and store the product at room temperature.
- ◆Do not throw and drop the product to avoid damages.
- ◆Do not expose the product to fire, high temperature, direct sunlight, etc.
- ◆Do not use organic solvents or other chemicals to clean the product.
- ◆Do not allow small particles to get into the product.
- ◆Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
- ◆Do not disassemble the product, or make any modifications to the structure or any parts of it.
- ◆Keep the product out of children' s reach.


02 Packing Content

English

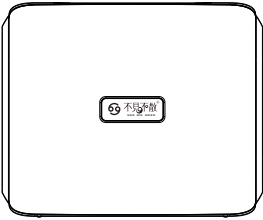
Speaker 1pc

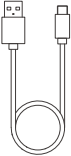
Type-C charging cable 1pc



Lanyard 1pc

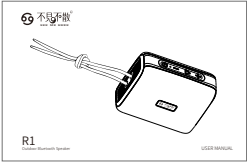
User manual 1pc

03 Keys Functions

English

Power button/ Mode button
Long press for 2 seconds to powe on /off
Long press for 8 seconds to reset

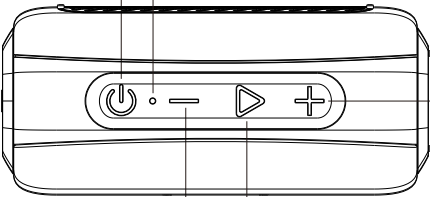

Volume Decrease
Short press "-": Decrease volume
Long press "-": Play previous song


LED Indicator
Bluetooth pairing status: The blue LED flashes quickly
Bluetooth successfully pairing: The blue LED light stays on
When music is paused: The blue LED flashes slowly
When charging: The red LED light stays on
When full charged: The red LED lights off

Volume Increase
Short Press "+": Increase Volume
Long Press "+": Play next song

Play/Pause
Short press to Play/Pause; When calling,short press to answer the call,long press to reject. Short press again to hang up.
Bluetooth Button
Long press to disconnect with the paired device, short press to reconnect with the last paired device.
TWS Button
When Bluetooth is disconnected, double-click to enter TWS pairing mode.

04 Interface Functions

English

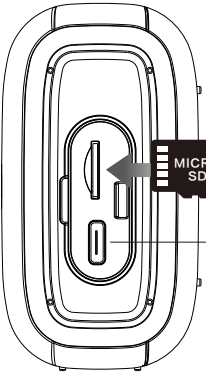


Micro SD card slot
In the powered-on state, insert a Micro-SD card, it will play the music stored in the card automatically after beeps.

Type-C charging slot
Charging with a DC-5V 1A USB Adaptor.

05 Bluetooth Connection

English

1. Turn on the speaker
Press and hold the power button for 2 seconds to turn on the speaker with a prompt sound. And the blue LED light flashes indicating it is in the pairing mode.

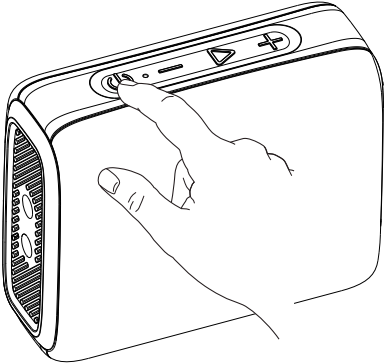



2. Connect it to your device
Turn on the Bluetooth of your device and select R1. Once the connection is completed, it will beep and the blue LED light will stay on.

The speaker will connect to the last-connected device automatically once the device's Bluetooth is turned on.

06 TWS (True Wireless Stereo) Function

English


Main Speaker


Dependent Speaker

1. Set up the TWS system
Turn on two R1 speakers and make sure no device connect with either of them. Double press one speaker's play button and there will be a beep sound to indicate pairing is taking place. Once pairing is complete, there will be another beep sound.

2. Pair two TWS speakers with a Bluetooth device
Select R1 in the Bluetooth settings menu of the Bluetooth device. There will be a sound indicating a successful connection and the LED indicator keeps on.

3. Stop the TWS
Double press either speaker's play buttons to disconnect it with the other one.

Tips:
1.For the first time of setting up the TWS system, the speaker which you double press the play button will work as the main speaker and the other one as the dependent speaker.
2.After the first connection, the main speaker will keep working as the main speaker and the dependent one will keep working as the dependent one in the future connection. And they will connect with each other automatically once they power on.
3. After setting up the TWS system, the dependent speaker's blue LED indicator stays on and operation.
4. The true wireless stereo function supports only 2 speakers.
5. After the TWS system is set up successfully, you just need to operate either speaker. The other one will do the same operation simultaneously.

07 Parameters


English

Basic	
Speaker type	Bluetooth Speaker
Storage type	Up to 32GB micro SD card
Power supply	Built-in 800mAh lithium battery
	Charge for 1.5 hours with a DC5V-1A USB adaptor

Technique	
Speaker unit	4 ohm 52mm external magnetic loudspeaker
Output power	5W THD=10%
Frequency Response	115Hz-20KHz
Bluetooth version	Bluetooth 5.0


Support media type	
File format	MP3、WMA MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps

95mm



78.5mm

43mm

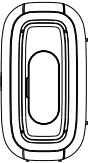

Size: 95 × 78.5 × 43MM
Weight: 275g (Built-in battery included)

08 Trouble Shooting

English

FAQ	Solution
Not able to connect to your device	1.Turn-off the speaker and restart
	2.If your device requires a passcode, enter 0000.
The music is playing staccato	1.Check whether the connecting device exceeds the effective connecting distance, or there is an obstacle between the speaker and the connecting device.
Micro SD card format error	1.Check whether the Micro SD card format is correct(the speaker supports the Micro SD card format as FAT32)
	2.Check the Micro SD card file are WAV,MP3,WMA,APE,FLAC.
Silent when playing	1.Check that the speaker volume is adjusted 2.Check if the speaker is on mute or paused.
Unable to turn on the speaker	1.Whether there is electricity in the built-in battery of the speaker.
No responses to any operation	1.The speaker system crashed, long press 8seconds to reset.