

MiFa

Sing it Just



MUSIC PLAYER

MT600



USB



TF



 
SUPER BASS




REMOTE CONTROL

● TWS (True Wireless Stereo) MODE :

Place two Mifa MT600 units next to one another.


- Press MODE on both units until Bluetooth mode is selected.
- On one of the units, long press and hold TWS button until the display shows “” to connect units.
- On a smart device, search for Mifa MT-600 within the Bluetooth menu and connect to it.
- The audio file will now be able to play from your smart device to both music players.

 TOP CONTROL PANEL OVERVIEW

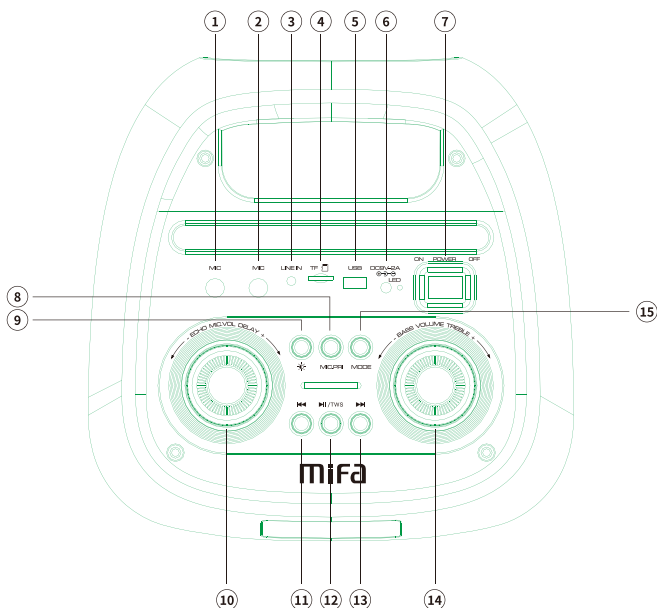

1. Wired Microphone Input: Plug the wired microphone into this jack
2. Wired Microphone Input: Plug the wired microphone into this jack
3. Line in: Play the files on any device connected to the Line-in jack
4. TF Card Input: Insert TF Card to play
5. USB Input: Insert USB to play
6. DC 9V input (charging slot)
7. Power: ON/OFF power
8. Mic. Pri.: Press on/off for microphone priority
9. Light Switch: Press to change light color and light style
10. Microphone Volume: Turn knob to adjust Mic. volume +/-
11. Previous Song: Short press to get previous song/channel; long press to fast backward
12. Short press to pause & play, long press to enter TWS mode
13. Next Song: Short press to get next song/channel; long press to fast forward
14. Main Volume: Turn the knob to adjust master volume +/-
15. Mode: Press to toggle LINE (Aux-In)/USB /FM /Wireless BT mode

 REMOTE CONTROL OVERVIEW

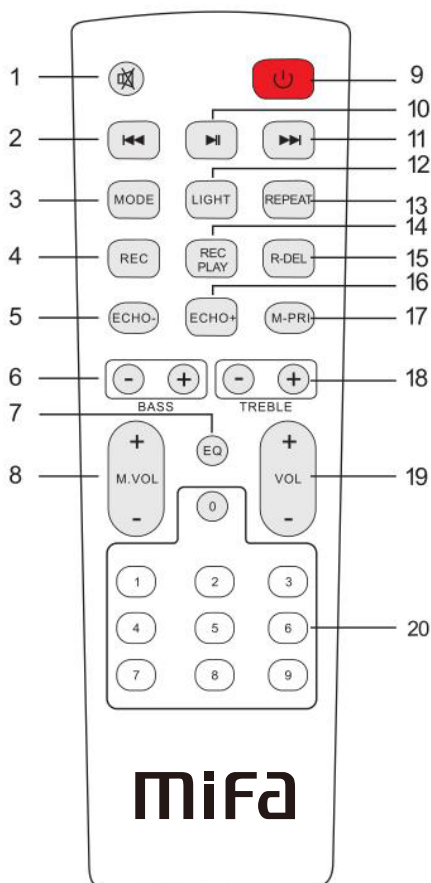

1.Mute

Available to mute at any mode

2.Previous Song/Station

In USB/TF Card Mode - Previous Song

In BT Connection Mode - Previous Song

In FM Mode - Previous Station.

3.Mode

Toggles Wireless BT/LINE IN/USB/TF/FM Modes

4.Record Function

In USB/TF Card Mode, Press "REC" Button to Record

5.Echo -

6.BASS +/-

7.EQ Function

8.Microphone Volume +/-

9.Stand By

10.Pause & Play

11.Next Song/Station

In USB/TF Card Mode - Next Song.

In BT Connection Mode - Next Song.

In FM Mode - Next Station.

12.Light Mode

13.Repeat Function

14.Record Play

15.Record Delete

16.Echo +

17.Microphone Priority

18.Treble +/-

19.Main Volume +/-

20.Number Buttons

In USB/TF Mode to Choose Tracks

INSTRUCTIONS FOR USE AND CARE

Safety Information

Please read this manual carefully before using the product.

- a. There are high voltage areas inside this unit that can cause injuries. Please do not open the unit. In case of a technical failure, please contact an authorized service center.
- b. Never place the unit in the rain or in moist areas in order to avoid electric shock or fire caused by short circuit.
- c. This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d. If technical maintenance is required, please contact the authorized service center.
- e. If the power supply cable is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

Package Content

- Remote Control
- Wireless Microphone
- Power Cable
- User's Manual

OPERATING INSTRUCTIONS

● WIRELESS BT MODE:

- Press MODE and select Bluetooth (Blue) mode for Bluetooth pairing.
- Once Bluetooth mode is selected, your music player will automatically enter pairing mode if not already paired to another device.
- Search for the model number MT600 on your Bluetooth menu on the smart device and select it.
- Once selected, the smart device and music player will connect. When connected you can control your music player through the top panel controls or the smart device.

● LINE IN MODE:

- Press MODE until AUX is selected.
- Make sure a 3.5mm AUX cable is plugged into your audio device from the AUX port on the top of music player.
- In AUX mode, you can only control the functions through the audio device; although, you can adjust the volume on either device.

● FM RADIO MODE

Press MODE until FM Radio is selected.

- Press the P/P (Play/Pause) button to auto scan FM Radio stations. All available stations will be stored automatically.
- Press the NEXT or PREVIOUS button to navigate through the saved radio stations.

● USB AND TF CARD MODE:

NOTE: Please make sure a USB Drive or TF Card is inserted in the USB/TF Card port located on the top of the music player.

- Press MODE until USB/TF Card is selected.
- You can use the control on the top of your music player to navigate through songs (tracks), play/pause, volume.