Mifa





M520 PARTY SPEAKER

USER MANUAL >

LISTEN.MIFA THE MUSIC POWER TO YOUR DEEP HEART!


Table of Contents

- 02 Warnings
- 03 Packing Content
- 04 Product Features
- 05 Product parameters
- 06 Keys function and interface instruction
- 07 LED screen instructions
- 08 Wireless micphone user guide
- 09 Remote control user guide
- 10 Bluetooth connection
- 11 TWS (True Wireless Stereo) connection
- 12 Two speakers wire connection function
- 13 Recording Function
- 14 Charging Battery
- 15 FAQ

02 Warnings

- Only use and store this product at room temperature
- ODo not expose the product to liquids
- ODo not attempt to dismantle or repair the product
- Ounplug this product from the wall outlet before cleaning. Don't use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- ONever discard the lithium battery in a fire as there is a risk of explosion
- © Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, or other sources, refer to the operating instruction.

03 Packing Content

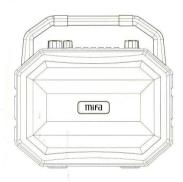

Speaker 1pc

USB power cable 1pc



Wireless microphone 1pc

(Accessary included)

Adaptor 1pc (Accessary included)



Remote controller (Accessary included)

list.



User manual / warranty card 1pc

M520




04 Product Features


- © Support TWS(True Wireless Stereo), connect 2 speakers wirelessly. And support more than 2 speakers connection through wire.
- © Support digital one key order, one key single loop, recording function.
- © Support wired micphone input, support UHF wireless micphone and can be used as an amplifier.
- © Playback from micro SD card,3.5mm input, USB flash drive or wireless via Bluetooth .
- ©Built-in 11.1V/4000mAh lithium battery pack.
- ©LED digital tube display, showing mode and time progress.
- ©30W super powerful audio output.

05 Product parameters

Basic parameters	在7月1日的时间的
Product type	Superpower party speaker
Operation mode	Knob & Button
Storage type	Max. 32GB micro SD card/ USB flash drive
Power supply	Built-in 11.1V/4000mAh lithium battery DC15V -(1.5A-2A) adaptor
Charging time	4-5 hours with a DC1.5-(1.5A-2A) adaptor
Technique Parameters	
Loudspeaker	6.5 inch mid-bass + 2 inch treble speaker unit+ ducting design
Output power	30W
Frequency response	60Hz-20KHz
Impedance level	4Ω
Bluetooth version	Bluetooth 4.2
Features	
Sound amplifying	Wireless/wired microphone sound amplifying supported
Bluetooth function	Support TWS (True Wireless Stereo) ,connect 2 speakers wirelessly . And support more than 2 speakers connection through wire
Micro SD card/ USB flash drive function	Playback from micro SD card, USB flash drive
Aux-in / Output	3.5mm input, more than 2 speakers connection through wire
File format supported	MP3、WMA、WAV、APE、FLAC
Appearance	《沙沙》中的《 古诗诗》的《中学》的诗
External slot	Micro SD card slot, microphone interface, USB flash drive slot, Aux-in/output interface
Product size	350mm*360mm*196mm
Product N.W.	4.25Kg

 06 Keys function and interface instruction

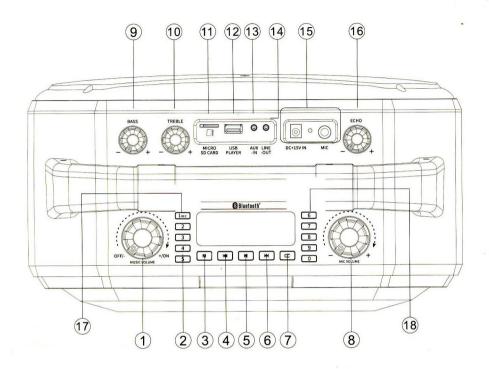




Power knob /Volume adjust


Power on/ off: Clockwise rotating the knob to "ON" position to power on. Anticlockwise rotating the switch to "OFF" position to power off.


Volume adjust: Clockwise rotating the knob to "+" position to turn up the volume. Anticlockwise rotating the switch to "-" position to turn down the volume.

 2 Number key 0 — 9
Micro SD card / USB flash disk music playing: Press the numbers directly then it can quick-play the relevant songs.
3 M Mode key
Short press mode key ,Aux-in mode ,Bluetooth mode, Micro SD card mode(A micro SD card must be inserted),USB flash drive mode(USB flash drive must be inserted) switch in order
Previous song: Short press to play the previous song ,press and hold to fast back (While Micro SD card and USB flash drive playing).
5 Play: Short press to play or pause.
6 Next song: Short press to play the next song, press and hold to fast forward (While Micro SD card and USB flash drive playing).
Loop: Short press " "single loop the song it plays , short press again to cancel the single loop mode while playing in micro SD card / USB flash drive mode.
8 Micphone volume: Rotating the knob to adjust the micphone volume
Bass adjust: Rotating the bass knob to adjust the bass.
TREBLE



Treble adjust: Rotating the treble knob to adjust the treble.

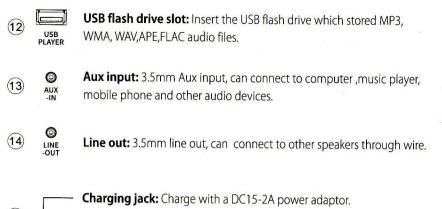

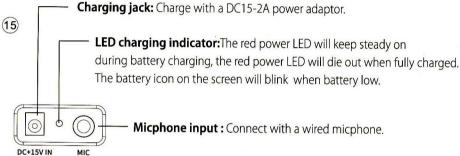



ЕСНО

- 17 Press and hold to record: A micro SD card or USB flash drive must be inserted.
- Press and hold to playback the recording: A micro SD card or USB Flash drive must be inserted, otherwise it will exit.

07 LED screen instructions





Line out mode



Bluetooth mode




Recording mode




Music playback (micro SD card/USB flash drive/REC)


08 Wireless micphone user guide

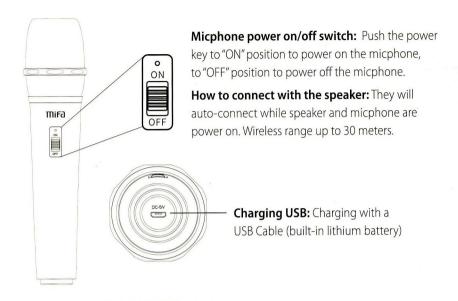

09 Remote control user guide

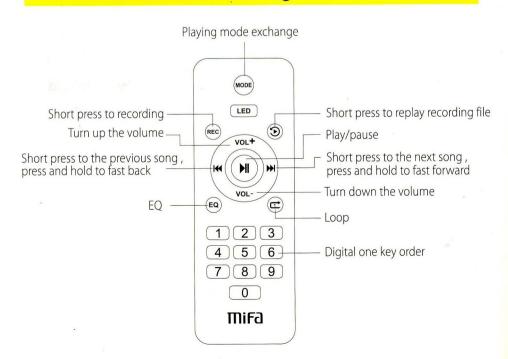

10 Bluetooth connection

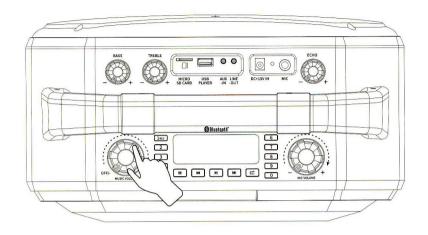

1, Power on

Clockwise rotating the knob to "ON" position to power on the speaker, press the _____ unti

🛊 is displayed on LED screen and flashing ,the Bluetooth is waiting for pairing.

2,Bluetooth playing

Set your Bluetooth device to search for Bluetooth devices, you will recognize the unit by its Bluetooth name "M520", once selected, your Bluetooth device will indicate as "Connected", and you will hear confirmation tone from the speaker, * will steady on upon completion of pairing. Then you can play audio from your Bluetooth device.

The speaker will auto-connect the Bluetooth device which last paired as long as the Bluetooth mode is on and the Bluetooth function of your device is on.

Tips:

If you want to connect with other devices, press and hold to disconnect first, and then the speaker is discoverable and ready to pair a new device. Only short press to auto-connect your last paired device.

TWS (True Wireless Stereo) connection





Speaker 1

Speaker 2

1. TWS (True Wireless Stereo) connection

Turn on 2 Bluetooth speakers which is in Bluetooth mode and do not connect any devices, choose any one of them and press (this speaker is the master speaker), you will hear confirmation tone "Ding-ding" from the speaker, then it turn to TWS pairing mode. For a second, you will hear confirmation tone "Ding" while paired, ** keeps steady on , then two speakers paired successfully.



2, How to pair the 2 TWS speakers with other BT music players.

Set your Bluetooth device to search for Bluetooth devices, you will recognize the unit by its Bluetooth name "M520", once selected, your Bluetooth device will indicate as "Connected", and you will hear confirmation tone from the speaker, 🕻 will steady on upon completion of pairing. Then you can play audio from your Bluetooth device.



3, TWS disconnection


Press and hold the 🙀 of the master speaker to disconnect(TWS and mobile phone connection will disconnect at the same time), short press the 🔳 of the master speaker to reconnect again.

Tips:

01, True wireless stereo function only support 2 speakers

02, When the TWS paired successfully, you just need to control one speaker, the other one will do the same operation, except for volume adjusting.

12 Two speakers wire connection function

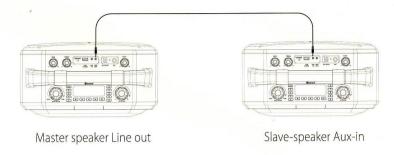

Two speakers connection via wire

Connect two speakers via the 3.5mm audio cable, one side plug in the Line-out jack of the master speaker, the other side plug in the Aux-in jack of the slave-speaker. Then it can play music on two speakers via wire.

Tips:

- 1,Only if the slave-speaker is in Aux-in mode then it can connect via wire.
- 2,The volume can not be controlled synchronously while two speakers in connection via wire.

13 Recording Function

Start to record

While USB flash drive or micro SD card inserted, press and hold " TREC ", then it enters Recording mode. Short press I starting to record, the recording time will be displayed on the screen. Short press I again to pause the recording, short press I to end the recording.

Recording playback


While USB flash drive or micro SD card which are with recording files, press and hold "6" to enter into recording playback mode and plays automatically. Short press to loop the recording, short press to end the recording.

Tips:

- 01, If micro SD card and USB flash drive are inserting at the same time, the recording files will auto –saved in the USB flash drive.
- 02, There will be a new folder auto-created in the micro SD card or USB flash drive naming "RECORD" while in recording and save the recording file in this folder. The name of the recording file will be regularly like REC001, REC002..... and increase progressively.

14 Charging Battery

By connecting the DC15V power adaptor, the battery will start charging and the LED light turns red. The Red power LED will turn off when fully charged.

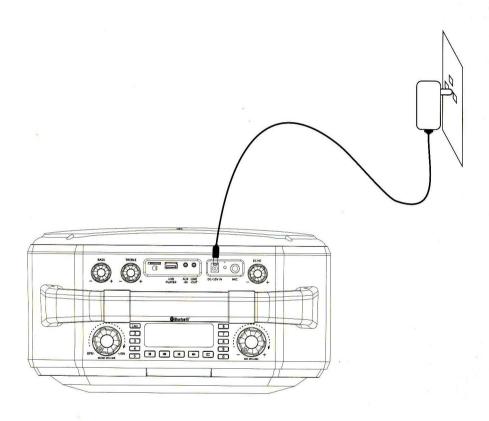



Tips:

Please do not play music while charging for battery protection.

Problems	What to do
Music not playing, no words display on the screen	1,Check if the battery is low,plug in the AC power cord to charge and operate.
	2,Check if the format of files in SD card or USB flash drive is correct(supported format is FAT32).
	3,Check if the files stored in micro SD card and USB flash drive is MP3 or WMA.
Aux-in mute	Check if the audio cable right connecting and the volume is turned to a reasonable level?
No sound heard while singing	Check if the microphone is turned on and the volume is turned to a reasonable level?
Amplifier quality is poor	Move the microphone nearer to the speaker.
Cannot pair to Bluetooth device	Make sure both Bluetooth device and Speaker are not connected to any other Bluetooth device. Turn power knob Off and then On again ,try to pair again.

Tips:

While you have two speakers with wireless microphone in hand and want to use it separately ,pls make sure the distance is 100meters or above between them,in order not to cause the interference.

While in TWS mode, only one wireless microphone can be used and pls keep the distance in 10 meters between two speakers.

Only one wireless microphone and one wired microphone can be used as an amplifier at the same time on one speaker.

A wireless microphone can connect with many speakers which share the same model name.



MIFA INNOVATIONS LLC Hotline: 4007-881-899 www.mifa.net Made in China

©MIFA all rights reserved. The product and the packaging trademarks or registered trademarks of MIFA INNOVATIONS LLC in the united states or other countries. All rights reserved. Other trademarks and trade names are registered mark of their respective owners. MIFA INNOVATIONS LLC for any errors that may occur in this manual does not undertake any responsibility. The information contained in this manual are subject to change no prior notice.