



MIFA INNOVATIONS LLC www.mifa-players.com Made in China


01 Warnings





- lacktriangle Please carefully read this user manual first.
- ♦ For the first use, a full follow is recommended.
- $\blacklozenge \ \mathsf{Please} \ \mathsf{use} \ \mathsf{and} \ \mathsf{store} \ \mathsf{the} \ \mathsf{product} \ \mathsf{at} \ \mathsf{room} \ \mathsf{temperature/normal} \ \mathsf{atmospheric} \ \mathsf{temperature}.$
- \spadesuit Do not throw and drop the product to avoid damages. ◆ Do not use this product near a heat source, such as radiators, heat regulators, stoves or other
- heat generating devices (including amplifiers). ♦ Do not plug the opening of the Music Player, do not plug the object into the Music Player vent or slot
- \spadesuit Do not throw it to avoid the damage caused by falling.
- $\label{eq:please} \blacklozenge \textit{Please use charger with the rated voltage of the Music Player charger.}$
- $\blacklozenge \ \, \text{If the connector does not match your device, please contact the vendor.}$
- Please turn the Music Player to the proper volume to avoid damage to your hearing. $\blacklozenge \textit{Regardless of any cause of the equipment damage, it must be repaired promptly by professional }$
- $maintenance\ personnel, unauthorized\ dismantling\ will\ invalidate\ the\ warranty.$
- If the battery is improperly replaced, there is a risk of explosion. Only the same or equivalent type of battery can be replaced.
- $\blacklozenge \textit{Warning that batteries (battery packs or battery packs) should not be exposed to conditions such as sunlight,}$ fire, or similar overheating.

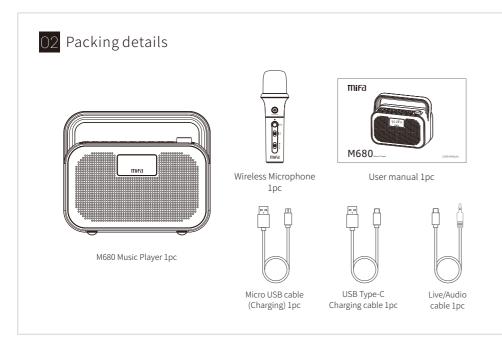


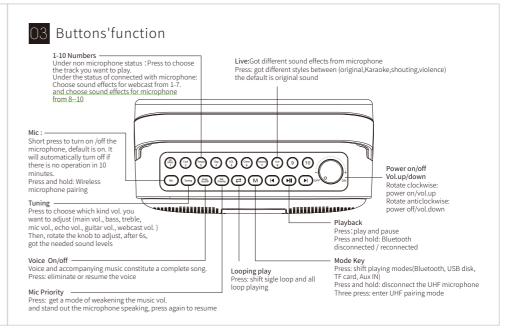


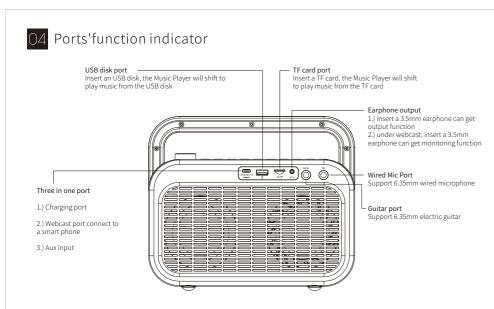

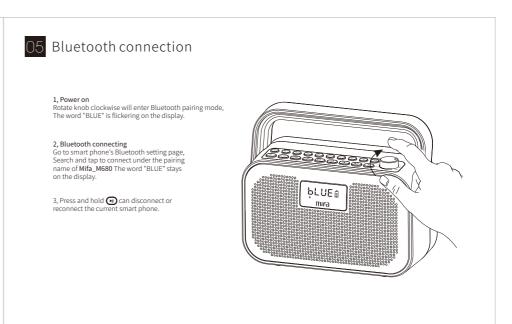

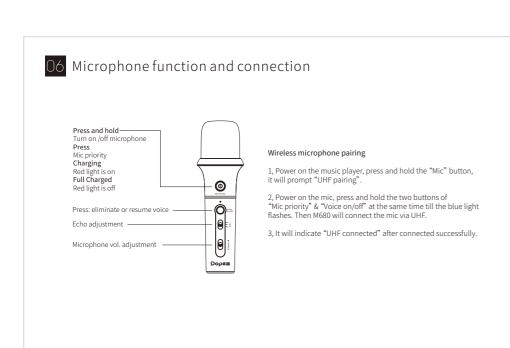

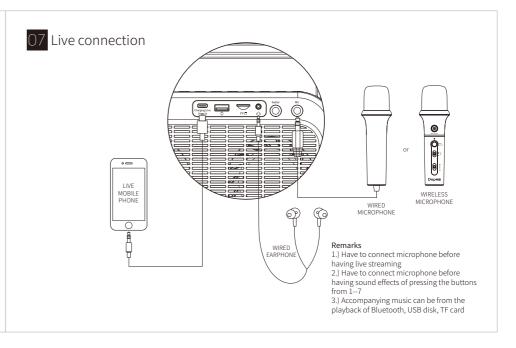

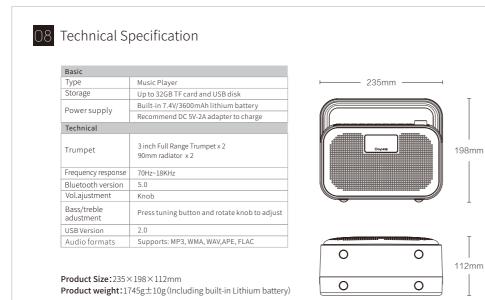

FAQ	Recommended Solutions
Can not pair	1.) Restart M680
	2.) Input"0000" if need pin code
Discontinuity	Check whether it is under effective distance(10m) Or any barrier stop the signal
Fail to play with USB disk and TF card	1.)Ensure the storage of USB disk & TF card are FAT32 format
	2.)Ensure the aduio formats are MP3, WMA, WAV,APE and FLAC
No Sound	Check whether it is at pause status or minimum vol.
Microphone no sound	1.)need connected wireless mic or wired mic well
	2.)Check whether it is at minimum vol.
Two different sound during webcast	Try to take off the monitering earphone