

راهنمای فارسی

harman/kardon SoundSticks 4

پخش کننده موسیقی بلوتوثی



تهیه شده در بخش خدمات پس از فروش شرکت شاب

آدرس: تهران، چیدر، میدان ندا، پلاک ۵۸


تلفن: (۱۰ خط) ۲۲۶۸۶۸۱۸

www.shobtech.com
technical@shobtech.com



۱) محتویات داخل جعبه :


/ 1. WHAT'S IN THE BOX

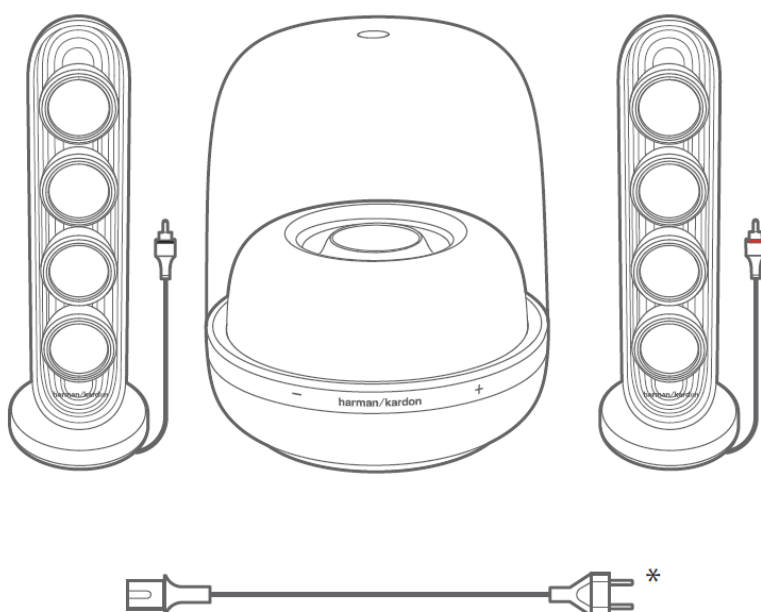

* Power cord quantity and plug type vary by regions.

(۲) دکمه ها :

/ 2. BUTTONS

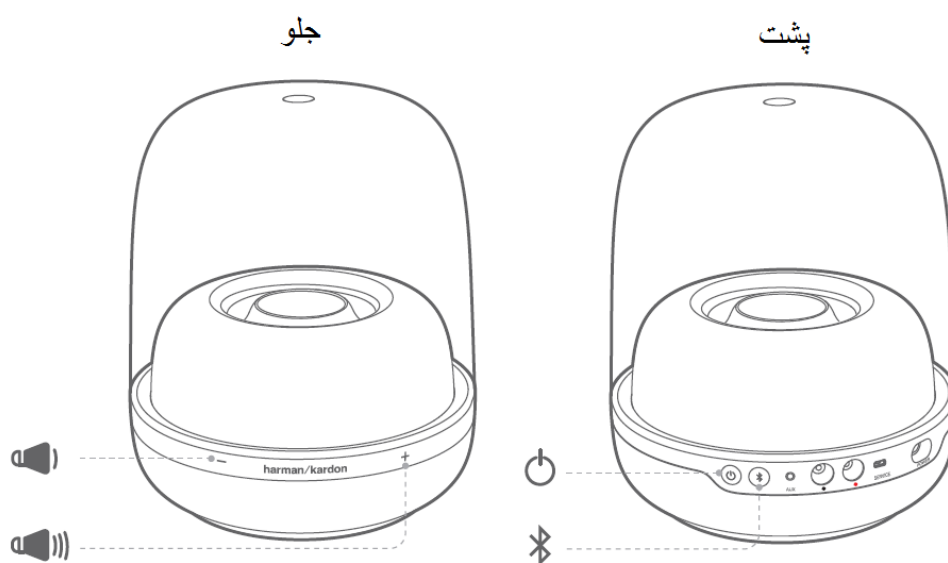

دکمه ها در شکل سمت راست:


- دکمه روشن/خاموش دستگاه
- دکمه بلوتوث

دکمه ها در شکل سمت چپ:

- دکمه کاهش ولوم صدا
- دکمه افزایش ولوم صدا

(۳) اتصالات :

/ 3. CONNECTIONS

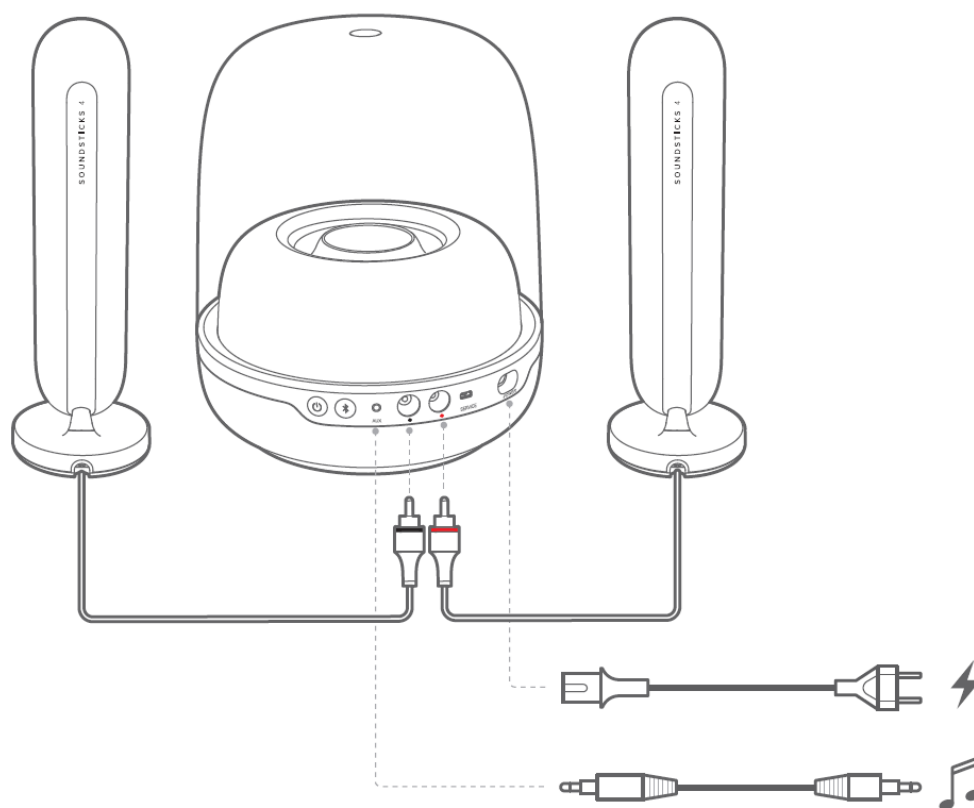

اتصالات از سمت چپ در شکل بالا:


Aux: ورودی صوتی با جک ۳,۵ میلیمتری (Aux-in)

خروجی صوتی

ورودی کابل برق شهر

۴) pairing بلوتوث

/ 4. BLUETOOTH® PAIRING

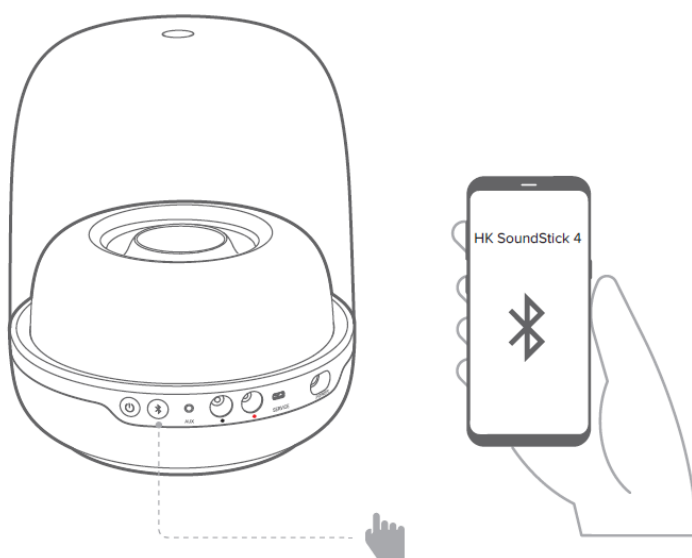

فشار دادن دکمه Bluetooth، دستگاه را به حالت Pairing برای اتصال به دستگاه های دیگر خواهد برد.

مشخصات دستگاه SoundSticks 4 :

/ 5. TECHNICAL SPECIFICATIONS

- Transducers: 1.4" full range x 8, 5.25" subwoofer x 1
- Rated output power: 2 x 20 W RMS + 1 x 100 W RMS
- Power input: 100 – 240 V ~ 50/60 Hz
- Frequency response: 40 Hz – 20 kHz
- Signal-to-noise ratio: 80 dB
- Bluetooth® version: 4.2
- Bluetooth® profile: A2DP 1.3, AVRCP 1.6
- Bluetooth® transmitter frequency range: 2.402 – 2.480 GHz
- Bluetooth® transmitter power: 0 - 9 dBm
- Bluetooth® transmitter modulation: GFSK, $\pi/4$ DQPSK, 8DPSK
- Dimensions (W x H x D): Woofer: 231 mm x 276 mm x 231 mm;
Satellite: 84 mm x 271 mm x 84 mm
- Weight: 4.432 kg